


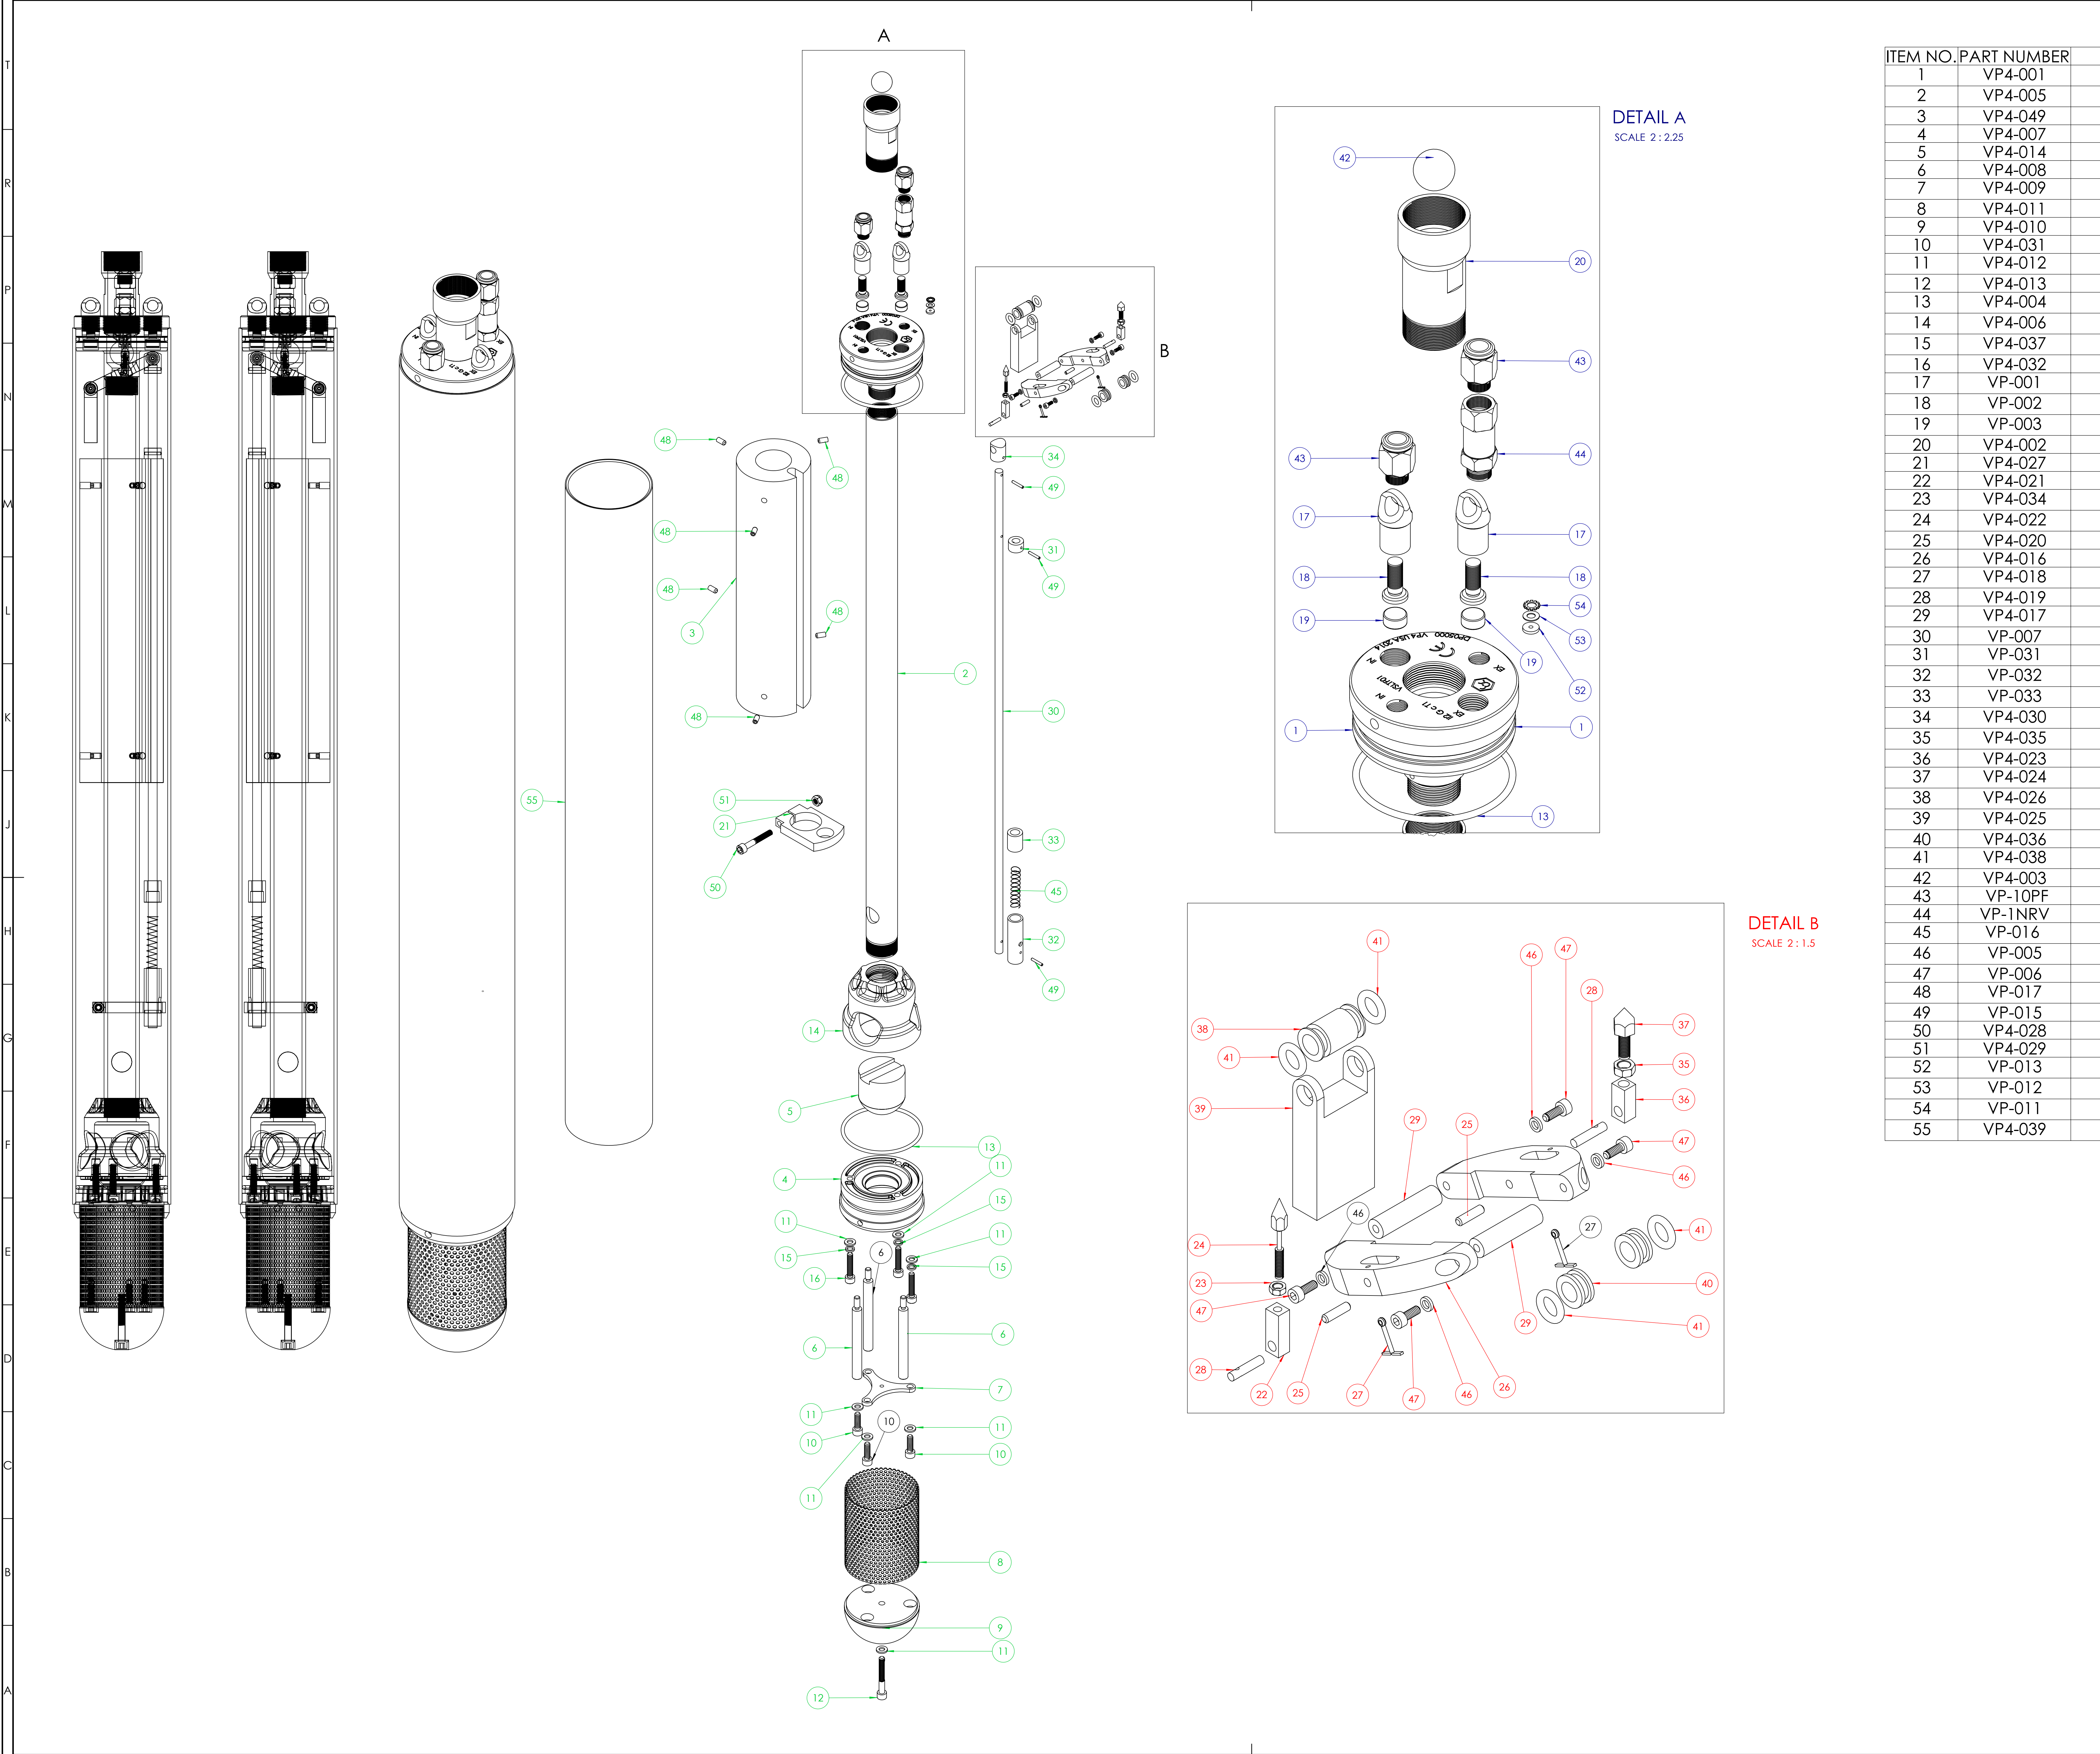

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	VP4-001	Pump Head	1
2	VP4-005	Central Discharge Tube	1
3	VP4-049	Float F	1
4	VP4-007	BCV Seat	1
5	VP4-014	BCV Shuttle	1
6	VP4-008	Strainer Stud	3
7	VP4-009	Spider	1
8	VP4-011	BCV Strainer	1
9	VP4-010	BCV Dome	1
10	VP4-031	Strainer Stud Screw	3
11	VP4-012	BCV Spring Washer	7
12	VP4-013	BCV Dome Screw	1
13	VP4-004	Casing Seal	2
14	VP4-006	BCV Cage	1
15	VP4-037	BCV Split Washer	3
16	VP4-032	BCV Seat Screw	3
17	VP-001	Magnet Lifting Eye	2
18	VP-002	Magnet Holder	2
19	VP-003	Magnet	2
20	VP4-002	Riser	1
21	VP4-027	Actuator Rod Guide	1
22	VP4-021	Air Inlet Block	1
23	VP4-034	Air Inlet Poppet Valve Nut	1
24	VP4-022	Air Inlet Poppet Hex	1
25	VP4-020	Rocker Arm Valve Pin	2
26	VP4-016	Rocker Arm	2
27	VP4-018	Rocker Arm Split Pin	2
28	VP4-019	Rocker Arm Valve Pin	2
29	VP4-017	Rocker Arm Spindle	2
30	VP-007	Actuator Rod	1
31	VP-031	Spring Guide Top Stop	1
32	VP-032	Actuator Spring Bottom Cap	1
33	VP-033	Actuator Spring Top Cap	1
34	VP4-030	Actuator Rod Top Stop	1
35	VP4-035	Air Exhaust Poppet Valve Nut	1
36	VP4-023	Air Exhaust Block	1
37	VP4-024	Air Exhaust Poppet Valve	1
38	VP4-026	Counter Weight Spool	1
39	VP4-025	Counter Weight	1
40	VP4-036	Rocker Arm Roller	2
41	VP4-038	Rocker O Ring	4
42	VP4-003	22mm Ball	1
43	VP-10PF	10mm Push Fit	2
44	VP-1NRV	1/4 Inch NRV	1
45	VP-016	Spring	1
46	VP-005	Rocker Arm Spring Washer	4
47	VP-006	Rocker Arm Screw	4
48	VP-017	Float F Centralising Screw	6
49	VP-015	Actuator Rod Pin	3
50	VP4-028	Actuator Rod Guide Screw	1
51	VP4-029	Actuator Rod Guide Nut	1
52	VP-013	Air Inlet Poppet Valve Rubber	1
53	VP-012	Air Inlet Poppet Valve Flat Washer	1
54	VP-011	Air Inlet Poppet Valve Star Washer	1
55	VP4-039	Outer Casing	1

FOR VP4 WITH FOAM FLOATS

REVISIONS				REVISION AND DATE		REVISION AND DATE		REVISION AND DATE	
REV	DATE	BY	CHKD	DATE	BY	DATE	BY	DATE	BY
1	31/03/15	PJW							
2	31/03/15	RO							
3	31/03/15	RO							
4	31/03/15	PJW							
5	31/03/15	PJW							
APPROVED				DRAWN		CHECKED		REVIEWED	